

Technical Data Sheet No. TD9610M Rev. F
Date of Issue: January 2026

OPERATING MANUAL

PSV-D

solenoid valve driver



AALBORG®

20 CORPORATE DRIVE • ORANGEBURG, NY 10962 • PHONE: 845.770.3000 • FAX: 845.770.3010
e-mail: info@aalborg.com • toll free in usa or canada: 1.800.866.3837 • web site: www.aalborg.com



⚠ CAUTION:

This product is not intended to be used in life support applications!

⚠ CAUTION:

Some of the IC devices used in the instrument are static-sensitive and may be damaged by improper handling. When adjusting or servicing the device, use of a grounded wrist strap is recommended to prevent inadvertent damage to the integral solid-state circuitry.

TABLE OF CONTENTS

(a) UNPACKING THE PSV-D DRIVER MODULE.....	1
a.1 Inspect Package for External Damage.....	1
a.2 Unpack the Valve Driver Module.....	1
a.3 Returning Merchandise for Repair.....	1
(b) INSTALLATION.....	2
b.1 Electrical Connections.....	2
b.1.1 Valve Connection to PSV-D.....	3
b.1.2 Input Reference Signal Connection.....	3
b.1.3 TTL Signal Connection.....	3
b.1.4 Power Connection.....	4
(c) DESCRIPTION.....	4
(d) SPECIFICATIONS.....	4
d.1 CE Compliance.....	5
(e) OPERATING INSTRUCTIONS.....	5
e.1 Preparation.....	5
e.2 Maximum Output Voltage to Valve.....	5
e.3 Set Point Reference Signal.....	6
e.4 TTL, Valve ON/OFF Control.....	6
(f) TROUBLESHOOTING.....	7
f.1 Common Conditions.....	7
f.2 Troubleshooting Guide.....	7
f.3 Technical Assistance.....	8

APPENDIX 1 COMPONENT DIAGRAMS

APPENDIX 2 DIMENSIONAL DRAWINGS

APPENDIX 3 WARRANTY

(a) UNPACKING THE PSV-D DRIVER MODULE

a.1 Inspect Package for External Damage

Your PSV-D Solenoid Valve Driver Module was carefully packed in a sturdy cardboard carton, with anti static cushioning materials to withstand shipping shock. Upon receipt, inspect the package for possible external damage. In case of external damage to the package contact the shipping company immediately.

a.2 Unpack the Valve Driver Module

Open the carton carefully from the top and inspect for any sign of concealed shipping damage. In addition to contacting the shipping carrier please forward a copy of any damage report to your distributor or Aalborg directly.

When unpacking the instrument please make sure that you have all the items indicated on the Packing List. Please report any shortages promptly.

a.3 Returning Merchandise for Repair

Please contact the customer service representative of your distributor or Aalborg if you purchased your equipment directly, and request a **Return Authorization Number (RAN)**. **Equipment returned without an RAN will not be accepted.** Aalborg reserves the right to charge a fee to the customer for equipment returned under warranty claims if the instruments are tested to be free from warranted defects.

Shipping charges are borne by the customer. Meters returned "collect" will not be accepted!

It is mandatory that any equipment returned for servicing be purged and neutralized of any dangerous contents including but not limited to toxic, bacterially infectious, corrosive or radioactive substances. No work shall be performed on a returned product unless the customer submits a fully executed, signed SAFETY CERTIFICATE. Please request form from the Service Manager.

(b) INSTALLATION



Caution: It is the users responsibility to determine if the instrument is appropriate for their OXYGEN application, and for specifying O2 cleaning service if required. Aalborg is not liable for any damage or personal injury, whatsoever, resulting from the use of this instrument for oxygen.

b.1 Electrical Connections

PIN	FUNCTION
1	Valve, E1
2	Valve, E2
3	Power supply, positive
4	Power supply, common
5	0 to 5 VDC, signal in
6	0 to 5 VDC, common
7	4 to 20 mA, signal in
8	4 to 20 mA, common
9	TTL valve ON/OFF control

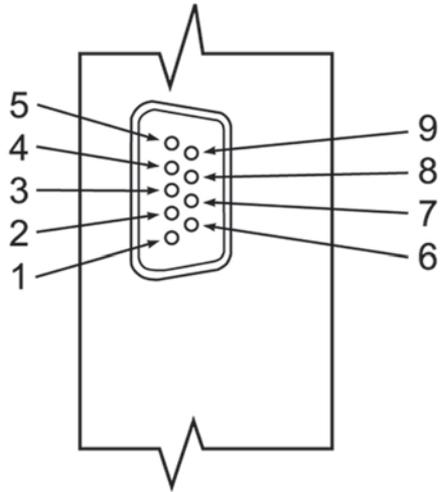


Figure b-1, 9 pin "D" Connector Pinouts for PSV-D Driver Module.



Important notes:

In general, "D" Connector numbering patterns are standardized. There are, however, some connectors with nonconforming patterns and the numbering sequence on your mating connector may or may not coincide with the numbering sequence shown in our pin configuration table above. It is imperative that you match the appropriate wires in accordance with the correct sequence regardless of the particular numbers displayed on your mating connector.

Make sure power is OFF when connecting or disconnecting any cables in the system.

The power input is protected by a 1600mA M (medium time lag) resettable fuse. If a shorting condition or polarity reversal occurs, the fuse will cut power to the valve driver circuit. Disconnect the power to the unit, remove the faulty condition, and reconnect the power. The fuse will reset once the faulty condition has been removed.

Use of the PSV-D valve driver in a manner other than that specified in this manual or in writing from Aalborg, may impair the protection provided by the equipment.

b.1.1 Valve Connection to PSV-D

Connect the two valve solenoid lead wires (E1 and E2) to pins 1 and 2 of the 9 pin "D" connector. There is no polarity on these connections.

b.1.2 Input Reference Signal Connection

Connect the desired analog reference signal input (0 to 5 VDC or 4 to 20 mA) to the appropriate pin locations on the 9 pin "D" connector of the PSV-D. The PSV-D will recognize automatically which signal is being provided. If both are connected, the PSV-D will give priority to the 4 to 20 mA signal when that signal is greater than 2 mA.

- (a) When using the 0 to 5 VDC reference signal, connect the POSITIVE side of the reference to pin 5, and the NEGATIVE (ground) to pin 6 on the 9 pin "D" connector.
- (b) When using the 4 to 20 mA reference signal, connect the POSITIVE side of the reference to pin 7, and the NEGATIVE (ground) to pin 8 on the 9 pin "D" connector.

For optional RS232 or IEEE488 interfaces please contact your distributor or Aalborg.



The NEGATIVE (ground) side of the reference signal inputs is internally connected on the printed circuit board to power ground.

b.1.3 TTL Signal Connection

The TTL valve ON/OFF control feature is not required for the device to function. Use of this SAFETY feature allows for complete de energizing of the solenoid valve to help ensure valve closure. If this feature is not used, a continuous supply of nominal power will be supplied to the solenoid valve.

When left unconnected on the 9 pin "D" connector, the device will default to the "HIGH" setting in accordance with the selected position of the jumper. The factory default setting is LOW (0 VDC) = OFF and HIGH (5 VDC) = ON.

Table I TTL Signal Selection

Jumper Setting (position)	TTL LOW (0 VDC)	TTL HIGH (5 VDC)
4	OFF	ON
5	ON	OFF

To reverse this configuration, remove the square cap on the back of the PSV-D (see figure e-1). The 4th and 5th position determines the TTL logic configuration. The factory default setting is set with the jumper on position 4. Moving this jumper to position 5 will yield the reverse configuration [LOW (0 VDC) = ON and HIGH (5 VDC) = OFF] (see Table I).

Always make sure that only one jumper is ever applied at any given time to either position 4 or 5. Connecting both at the same time may result in damage to the electronics, and improper control.

b.1.4 Power Connection

With the DC power supply source OFF, connect the power to the DC power jack OR the 9 pin "D" connector.



DO NOT CONNECT POWER TO BOTH CONNECTION POINTS AT THE SAME TIME. This may result in permanent damage to the power supplies and the PSV-D.

(c) DESCRIPTION

The PSV-D solenoid driver module is designed to regulate the power supplied to the proportional solenoid valve (PSV) based on a reference signal. A 0 to 5 VDC or 4 to 20 mA analog set point signal input is used as a reference to proportionally control the output power to the PSV valve. By increasing or decreasing this analog reference signal, the PSV valve volume of gases or liquids processed increases or decreases respectively.

(d) SPECIFICATIONS

Environmental (per IEC 664): Installation Level II; Pollution Degree II.

Connection: 9 pin male "D" connector for input/output signals.

Power Input: +12 to 30 VDC; 1A @ 12 VDC, 0.5A @ 24 VDC via 9 pin "D" connector or DC power jack (center positive).

Input Signal: AUTO SELECT feature allows circuit to recognize which analog input reference (0 to 5 VDC or 4 to 20 mA) signal is received.

For optional RS232 or IEEE488 interfaces please contact your distributor or Aalborg.

TTL ON/OFF: Jumper selectable LOW (0 VDC) OFF – HIGH (5 VDC) ON [default setting] or reverse, to select valve ON/OFF status.

Valve Output Power: Jumper selectable to +15, +22, and +29 VDC with adjacent potentiometer to obtain ± 2 VDC [default setting 22 VDC].

Fuse Rating: internal resettable 1.6A fuse protects the electronics on the power input.

Polarity Protection: internal rectifier circuit protects from reversed polarity on the power input.


Operating Temperature: 32 °F (0 °C) to 122 °F (50 °C).

d.1 CE Compliance

Any model PSV-D bearing a CE marking on it, is in compliance with the below stated test standards currently accepted.

EMC Compliance with 89/336/EEC as amended;
Emission Standard: EN 55011:1991, Group 1, Class A
Immunity Standard: EN 55082 2:1995

(e) OPERATING INSTRUCTIONS

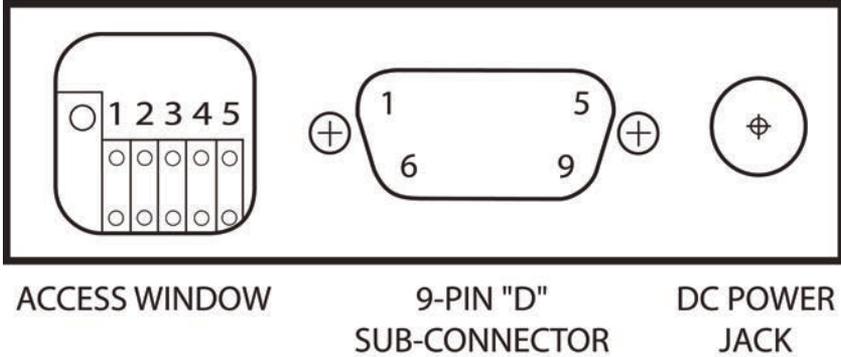

CAUTION: If the valve is left in the active mode for an extended period of time, it may become warm or even hot to the touch. Use care in avoiding direct contact with the valve during operation.

e.1 Preparation

It is assumed that the PSV-D has been correctly installed as described in section (b). Turn the DC power source ON. A pilot light on the front of the PSV-D will illuminate indicating the device is active.

e.2 Maximum Output Voltage to Valve

As shown in Figure e-1, remove the square plug of the PSV-D for the access window. Position 1, 2, and 3 on the header block determine the maximum output voltage supplied to the valve. The factory default setting is 22 VDC (position 2).

Table II Maximum Valve Output Selection

Jumper Setting (position)	Output Voltage to Valve (VDC)
1	15
2	22
3	29

The maximum output voltage supplied to the valve, can be set/changed in the field. Changing this will allow for optimal use of the input reference signal to output valve voltage based on the specific flow rate and operating pressure applied to the valve.

With the power ON, use Table II and Figure e-1 to make the appropriate changes as necessary. (Note: This procedure may not need to be performed. It is provided as an added feature to further customize your system.) Move the jumper to either position 1, 2, or 3, and use the adjacent potentiometer [P1] to make fine adjustments to the desired output voltage.



Always make sure that only one jumper is ever applied at any given time to either position 1, 2, or 3. Connecting two or more at the same time may result in damage to the electronics, and improper control.

e.3 Set Point Reference Signal

The PSV-D solenoid valve driver in conjunction with the PSV solenoid valve allow the user to set the flow to any desired flow rate within the range of the particular model installed. The PSV solenoid valve is normally closed when no power is applied.

The set point input responds to an analog 0 to 5 VDC or 4 to 20 mA reference signal. Use this reference signal via the PSV-D valve driver to set the flow rate of the PSV solenoid valve.

e.4 TTL, Valve ON/OFF Control

It may, at times, be desirable to set the flow and maintain that setting while being able to turn the flow control valve off and on again. This can be accomplished by applying a (TTL compatible) high and low signal of +5 VDC and 0 VDC to pin 9 on the 9 pin "D" connector. The factory default configuration is set so that when 0 VDC (LOW) signal is applied, the solenoid valve is not powered and therefore will remain normally closed. Conversely, a +5 VDC (HIGH) signal applied will allow the solenoid valve to remain active. The solenoid valve will remain active when the VALVE OFF pin remains "floating". (To reverse this configuration, see section b.1.3)

Toggleing the HIGH/LOW signal on and off will allow for activating and deactivating the solenoid valve. Remember: If the TTL signal line is connected, the valve will only function if the appropriate logic input is applied.

(f) TROUBLESHOOTING

f.1 Common Conditions

Your Solenoid Valve Driver Module was thoroughly checked at numerous quality control points during and after manufacturing and assembly operations.

It was carefully packed to prevent damage during shipment. Should you feel that the instrument is not functioning properly please check for the following common conditions first:

Are all cables connected correctly?

Is the power supply correctly selected according to requirements?

Were the connector pinouts matched properly? When interchanging with other manufacturers' equipment, cables and connectors must be carefully wired for correct pin configurations.

f.2 Troubleshooting Guide

INDICATION	LIKELY REASON	REMEDY
no power to valve	power supply off	check connection of power supply
	power supply problem	disconnect GFM transducer from power supply; remove the shorting condition or check polarities; fuse resets automatically
	pc board defective	check power supply for appropriate output
no response to set point	inadequate gas pressure	return to factory for replacement
	cable or connector malfunction	apply appropriate gas pressure
	cable or connector malfunction	check cables and all connections or replace
	set point is too low (<2% of full scale)	re adjust set point
	valve adjustment wrong	re adjust valve
	pc board defective	return to factory for replacement

INDICATION	LIKELY REASON	REMEDY
valve does not work in "active" position	incorrect valve adjustment	re-adjust valve
	pc board defect	return to factory for replacement
	cable or connector malfunction	check cable and connectors or replace
	differential pressure too high	decrease pressure to correct level
	insufficient inlet pressure	adjust appropriately
valve does not work in close position	incorrect valve adjustment	re adjust valve
	pc board defect	return to factory for replacement
	cable or connector malfunction	check cable and connectors or replace
	orifice obstructed	disassemble to remove impediments or return to factory


For best results it is recommended that instruments are returned to the factory for servicing. See section a.3 for return procedures.

f.3 Technical Assistance

Aalborg Instruments will provide technical assistance over the phone to qualified repair personnel. Please call our Technical Assistance at 845-770-3000. Please have your Serial Number and Model Number ready when you call.

APPENDIX 1


COMPONENTS DIAGRAM

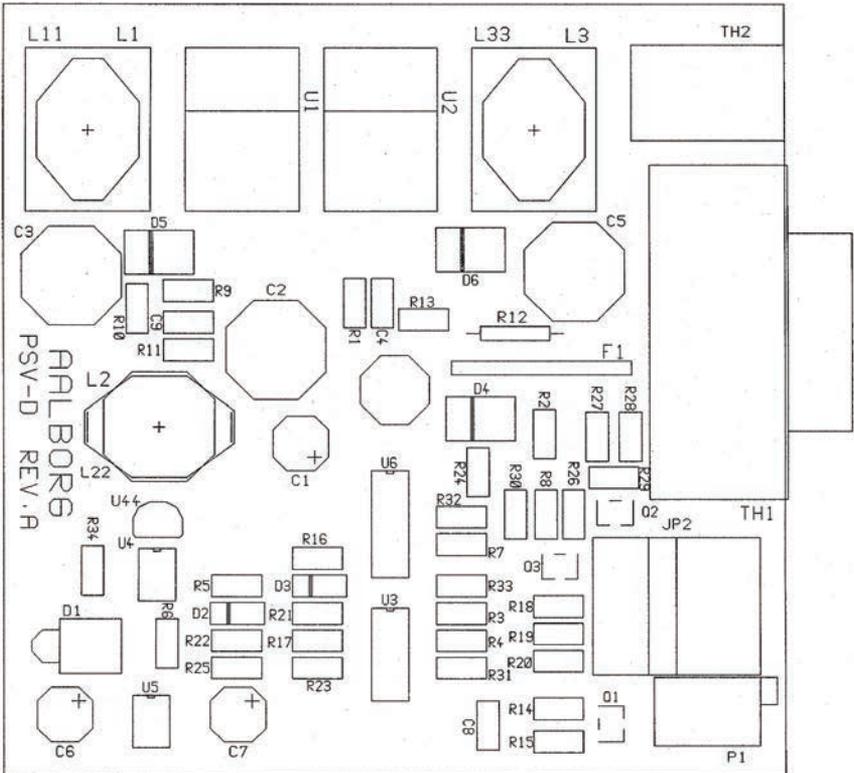

PSV-D Solenoid Valve Driver PC Board

APPENDIX 2

DIMENSIONAL DRAWINGS

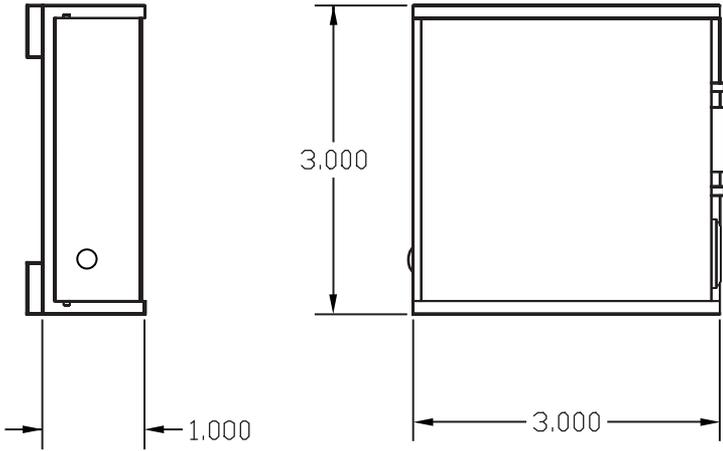

PSV-D Solenoid Valve Driver Module

NOTES: Aalborg reserves the right to change designs and dimensions at its sole discretion at any time without notice. For certified dimensions please contact Aalborg.

APPENDIX 3

WARRANTY

Limited
Warranty

Policy
Coverage

Aalborg® warrants its products to be free from defects in materials and workmanship for a period of not to exceed (12) months from the date of purchase.

Customer Responsibilities

It is the sole responsibility of the customer to ensure the proper selection of equipment that is compatible with the flow medium and operating conditions in use. Products must be operated by qualified personnel knowledgeable in the equipment's intended application, limitations, and proper usage. Use of the equipment in a manner inconsistent with operational guidelines, including exposure to incompatible gases, liquids, or conditions, voids all warranty coverage.

Limitations and Exclusions

This warranty does not cover:

Product that was used outside of its stated specifications.

Products that, upon examination by Seller, or Seller's authorized service provider, are found to have been mishandled, misused, abused, or damaged by Buyer or any third party. A product repaired or modified by performed by a party other than Aalborg® or its authorized representatives. Improperly stored, installed, operated, or maintained in a manner inconsistent with Seller's instructions. Defects attributed to normal wear and tear or failure to comply with Seller's safety warnings. Indirect, incidental, consequential, special, punitive, or consequential damages, including lost profits. Shipping or transportation charges to Aalborg® or its authorized service facility.

Return Authorizations

Goods shall not be returned without Seller's prior authorization.

It is recommended that our service representatives be contacted to rectify product issues remotely, if possible. When not possible, request a Return Authorization Number (RAN) and a SERVICE SAFETY ASSURANCE CERTIFICATE form to be completed and attached for factory evaluation.

If a defect covered by this warranty is discovered, the product will be repaired or replaced at Aalborg's sole discretion, free of charge for parts and labor. Such repair, replacement, or credit shall be Buyer's sole remedy for defective Goods and Services.

For defective Goods not covered by this warranty, repair or replacement shall not be performed until and unless Buyer issues an Order to Seller authorizing such repair or replacement at Seller's then-current repair or replacement price. In addition, Seller may charge Buyer for any testing or inspection costs. In no event shall Seller retain or store returned Goods for more than three (3) months.

Disclaimer

THESE WARRANTIES, INCLUDING THE REMEDIES SET FORTH HEREIN, ARE EXCLUSIVE AND ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS INTENDED OR GIVEN.

AALBORG INSTRUMENTS & CONTROLS, INC.
20 Corporate Drive, Orangeburg, NY 10962
Phone: 845-770-3000
Email: info@aalborg.com
Website: www.aalborg.com

Form nr.: AAL-WP1

NOTE: Follow Return Procedures In Section a.3.

ASIAN SERVICE FACILITY

Authorized Repair and Service Facility for Aalborg Thermal Mass Flow Systems

AALBORG-Beijing Comity

MEASURE & CONTROL CO.

Floor 1 Tower B Jindayuan Office Building
Xisanqi, Hai Dian District, Beijing, China

Phone: 86-10-6295-0464, 86-10-6295-0465

Fax: 86-10-6295-0466

Website: <http://www.comity-tec.com>

EUROPEAN SERVICE FACILITY

Authorized Repair and Service Facility for Aalborg Thermal Mass Flow Systems

AALBORG-ANALYT-MTC

MESSTECHNIK GMBH

Klosterrunsstraße 18

P.O. Box 1321

Müllheim D-79379 Germany

Telefon: +49 (0)7631 5545

Fax: +49 (0)7631 14740

Website: www.analyt-mtc.de

e-mail: info@analyt-mtc.de

175, avenue d'Alsace

68000 COLMAR

Tel: 03 89 41 47 78

Fax: 03 89 41 59 88

e-mail: ANALYT_MTC@T-online.de

Products Manufactured By Aalborg

ROTAMETERS

Single Tube

Aluminum / Brass / Stainless ● Interchangeable Glass Flow Tubes ● Optional Valves
Multiple Tube

Two to Six Channels ● Aluminum or Stainless

PTFE Single and Multiple Tube

Chemically Inert ● 1 to 4 Channels ● Interchangeable Glass Flow tubes

PTFE - PFA

Chemically Inert ● Low to Medium Flow of Corrosive Liquids with PFA Flow Tube
Kits

Aluminum / Stainless / PTFE ● Including Five Glass Flow Tubes and a Set of Floats
Gas Proportioners

Aluminum / Stainless ● Used for Blending Two or Three Gases

Medium Range

Glass Safety Shield ● Dual Air and Water Scale

Optical Sensor Switch

Non-Invasive Means for Detection of a High or Low Flow

High Flow Industrial Stainless Steel Flow Meters

Heavy Duty Stainless Steel ● Direct Reading Air and Water Scales

VALVES

Barstock

Brass or Stainless ● Standard or High Precision

PTFE

Chemically Inert ● Needle or Metering

Proportionating Solenoid

Stainless ● For Controlling Gas or Liquid Flow

● Pulse width Modulated

SMV ● Stepping Motor Valve

peristaltic PUMPS

Fixed RPM Pumps

Pump Heads

Tubing Pumps

Variable Speeds

Dispensing Pumps

Flexible Tubings

ELECTRONIC METERS & CONTROLLERS

Low Cost Mass Flow Meters

Aluminum or Stainless ● With or Without LCD Readout

Low Cost Mass Flow Controllers

Aluminum or Stainless ● With or Without LCD Readout

Mass Flow Controllers

Stainless ● One to Four Channel Systems

Digital Mass Flow Controllers

Auto Zero ● Totalizer ● Alarms ● Built in RS485

Multi Parameter Digital Mass Flow Meters

Displays Flow Pressure and Temperature

Paddle Wheel Meters

For Liquids ● Optional Temperature Measurements

Vortex In-Line and Insertion Flow Meters

Steam / Liquid and Gas Service

Smart Rate / Totalizer / Signal Conditioner

LCD Keypad ● RS232 / 485 ● Pulse Output ● Alarms